



Operating Instructions for JSS-3/6/12 Jack Stands

⚠ WARNING

- Never exceed rated capacity of the stand.
- Use stands only in pairs.
- Always make sure both stands are set at same height and holding dogs are fully engaged.
- Use stands only on hard and level surfaces.
- Always center load in saddles.
- Always use in locations specified by the vehicle manufacturer.
- Never crawl under a vehicle to place a stand.
- Always lower a vehicle slowly.
- Failure to heed all of the above warnings may cause serious injury and/or property damage.

Specifications

Stock number	441003	441006	441012
Model number	JSS-3	JSS-6	JSS-12
Rated load capacity	6,000 lb (3T)	12,000 lb (6T)	24,000 lb (12T)
Minimum height	11-3/4"	15"	19"
Maximum height	17-1/4"	24-1/4"	30-3/8"
Saddle size	4-3/4" x 1-1/8"	4-7/8" x 1-1/8"	6-1/2" x 1-3/4"
Base size	7-5/8" x 8-5/8"	11-1/4" x 10"	12-3/8" x 14-1/4"
Weight (pair)	19 lb	34 lb	78 lb
	Complies with ANSI/ASME PALD-4 standards		

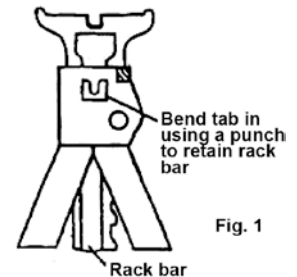


Fig. 1

Specifications were current at time of publication, but because of our policy of continuous improvement, JET, reserves the right to change specifications at any time and without prior notice, without incurring obligations.

Prior to Operation

1. Check to make sure retaining tab on stand collar is bent in to keep rack bar from being pulled out. If tab is not bent in, bend using a punch and hammer. See Figure 1.
2. Check stand for bent, worn, loose or missing parts. Discard any stand that is damaged, badly worn, or operates abnormally.

Operation

1. Raise vehicle to desired height. Vehicle must be stable with wheels blocked and parking brake set.
2. Extend both stands to same desired height. Confirm that holding dogs are fully seated in rack bars.
3. Place stands under support points specified by the vehicle manufacturer.
4. Carefully lower vehicle onto stands with support points centered in saddles. Make sure vehicle remains stable.

Stand Removal

1. Confirm vehicle stability. Make sure wheels are blocked and the parking brake is set.
2. Carefully raise vehicle just enough to clear stands. Make sure vehicle remains stable.
3. Remove stands and carefully lower vehicle to the floor. Do not crawl under vehicle to remove stands.
4. Use release handle to lower stands to their lowest height.

Lubrication

Lubricate release handle pivot points with motor oil.

Repair

Replacement parts are not available for this stand. If repair is necessary, discard stand and replace.

JET

427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-441003
Revision G1 05/2014
Copyright © 2014 JET

1.0 Warranty and Service

JET® warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official JET branded website.

- JET products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations or lack of maintenance.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. JET has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the JET website.

More Information

JET is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the JET website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

JET LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

JET SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

JET sells through distributors only. The specifications listed in JET printed materials and on official JET website are given as general information and are not binding. JET reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by JPW Industries, Inc.

Product Listing with Warranty Period

90 Days – Parts; Consumable items; Light-Duty Air Tools
1 Year – Motors; Machine Accessories; Heavy-Duty Air Tools; Pro-Duty Air Tools
2 Year – Metalworking Machinery; Electric Hoists, Electric Hoist Accessories
5 Year – Woodworking Machinery
Limited Lifetime – JET Parallel clamps; VOLT Series Electric Hoists; Manual Hoists; Manual Hoist Accessories; Shop Tools; Warehouse & Dock products; Hand Tools

NOTE: JET is a division of JPW Industries, Inc. References in this document to JET also apply to JPW Industries, Inc., or any of its successors in interest to the JET brand.